



Thank you for your purchase!

The Beach Buggy stands for quality that you can rely on.

Please, if you should encounter any problems with your Beach Buggy inform us and give us the chance to improve our product.

Your KINDERspirit – Team

info@kinderspirit.co.nz



Beach Buggy Instruction Manual

Before operating the Beach buggy please read this manual and safety instructions carefully to get familiar with the right set up, features and operations of the wagon!

Thank you

Your KINDERspirit - Team



The Beach buggy is fully assembled upon arrival. However the tyres need to be installed which is fairly easy and straightforward.

Fitting the wheel



Place the large wheel on the rear axle with the valve directed to the outside.
Put the washer on the outside and lock the wheels with the wing screw.
Repeat the same for the small wheels on the front axle.

Note that these are pneumatic tyres that can be optimised with air pressure according to the terrain you use the wagon on.

Unfolding / Folding IMPORTANT!!

To unfold the Beach Buggy press the push button of the self-locking hinge and lift the front and rear metal frame into a vertical position until frames snap into the hinge.



To prevent falls or injuries, children must remain seated with their arms and legs inside the wagon while riding. Do not exceed the overall maximum loading capacity of 80 kg.

The proper and safe use of the Beach buggy is your own responsibility.

Hopping on and off only on flat surfaces. Ensure that the front axle is aligned with the longitudinal axis of the wagon. Children need to be assisted by adults.

It is recommended that the wagon is inspected for damage before use.

Periodically check hardware and tighten screws where necessary.

Careful use is required on steep driveways, streets, roadways or in-clines. Don't use the Beach Buggy as a sledge.

An operator should pull the wagon at all times. Failure to the above safety rules and other basic safety precautions may result in serious personal injury or even death.



It is important to read the entire manual and the safety instructions carefully to become familiar with the product before you begin using it.

In case of leasing or re-selling, it is important to provide the full instruction manual and safety instructions, as part of the product.

Adult assembly is required. Small parts may present choking hazards to children under the age of three before assembly.

Failure to the following safety rules and other basic safety precautions may result in serious personal injury or even death.

Safety instructions:

Continuous adult supervision is required


The Beach Buggy should only be used for kids 36 month or older.

No more than 2 passengers on the wagon at a time

Do not let children sit on the side frame of the Beach Buggy because of danger of tipping the wagon and breaking the side-rods !!



To secure the side poles lift the Velcro sides of the Beach Buggy. A snap lock locks the poles into position. This can be quite resistive in the beginning but will become easier with usage.

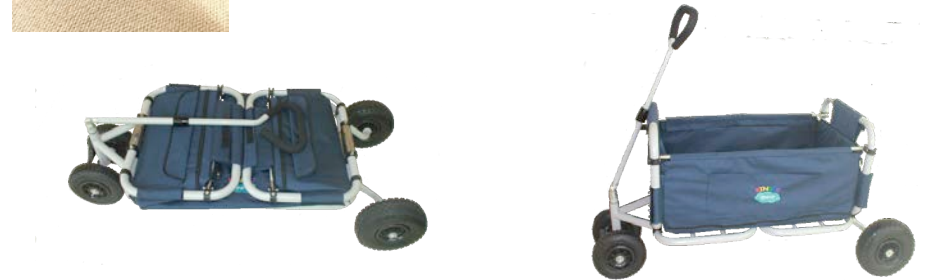

To fold the Beach Buggy make sure you keep the push button pressed while pushing down the front and rear frames. Once the wagon is in the folded state, secure it with the textile strap and Velcro presented on the other side. This will maintain the wagon in this position.

Secure the handle with the Velcro strap on the front of the wagons textile body when wagon isn't in use or will be folded.





The carrying bag is now ready to go on top on the wagon. Two locking clips will secure the bag so that the wagon can be pulled or carried.



Extending the pulling arm

Pressing the locking pins out of their position while pulling the arm- can extend the pulling arm of the wagon. To ease the mechanism, please loosen the black screw cap.

Parking Brake

The parking brake is already installed on the wagon. To lock the wheels simply press the brake into its horizontal position. To unlock lift it into its vertical position.



Maintenance

After the use of the wagon in soft sand, sand can get into the brake causing the brake to get stuck. In order to avoid issues please clean the brake by rinsing with water while moving the brake parts.



Warranty

The beach wagon is covered by a 12-month warranty from the date of purchase. The warranty covers manufacturing defects that occur during normal use. Any breakage caused by accidental damage or as a result of abuse or misuse (as set out in the relevant manual) is not covered.

If we diagnose that you require a spare part, we will send it to you by post with easy to follow fitting instructions. Failing which we will collect, repair (if possible) and return the faulty product (or its replacement) at our cost (in the case of a faulty wagon, this must be in its original packaging). If the fault is not covered by these warranty conditions, you will be liable for the courier and admin charges plus the costs of parts and labour. A repair will normally be carried out but in the unlikely event that the wagon cannot be fixed, a replacement will be given. Any repairs or replacements made without charge do not carry a new warranty beyond that of the original purchase.

Any wagons purchased to a special price due to fault in the wagons are only covered by a 6 month warranty which excludes the existing faults of the wagon.